

Pro-Paint Stand

Assembly Instructions

Thank you for purchasing the Pro-Paint Stand!

If you have any questions visit our website at:

www.propaintstand.com

Identify all the parts included with your stand:

		
A Front Leg	B Rear Leg	C Center Post
		
D Center Tree	E Main Carrier	F Lower Attachments
		
G Top Attachment	H 2 Wheels	I Handle

			
J			
Hardware Kit			

Note:

Before assembly attach all knobs to appropriate parts.

Install knobs where nuts are welded to tubing and main pivot. Refer to example...



The main pivot knob requires included 3/8 washer.

1.) Begin assembly with items A, B, and C. Attach front and rear legs (A + B) to center post (C).



1A

**Ensure that
the
adjusting
knob is on
top. Attach
legs with 3/8
X 3/4
carriage
bolts and
nuts
provided in
hardware
package (J)
refer to
pictures 1A
and 1B**



1B

**2.) Install
wheels (H)
to axle
using one
large
washer and
one cotter
pin per
wheel.
Bend cotter
pin into
place and
inflate tires
to 15-20psi.**



2

**3.) Install
center tree
(D) into the
top of
center post
(C). Hand
tighten
adjusting
knob to
secure.**



3

4.) Install main carrier (E) into center tree (D), the carrier should be over the rear wheels.



4

5.) Install upper attachment bar (G) into main carrier and hand tighten adjusting knob to secure.



5

6.) Install lower attachments (F) onto main carrier bar (E) the hooks should be facing upwards.



6

7.) Install handle (I) to center tree (D) and tighten knob.



7A

**Handle can
be stowed
away in
holder on
left.**



7B